



PRS1043A

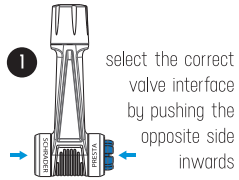

select the correct valve interface by pushing the opposite side inwards



push the head on the valve until it snaps into place

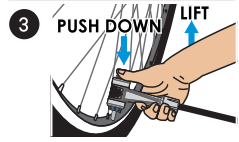

inflate the tire and push the top section to release the head